livingfurn

Assembly Instructions

BRIX LIVO

1. Use a level to ensure the bracket is completely horizontal. With a pencil, mark the drill points through the screw holes in the bracket onto the wall.
2. Double-check the alignment to ensure it's level, then drill holes in the wall at the marks made.
3. Insert the screws through the holes in the bracket into the wall plugs. Use a screwdriver to tighten each screw firmly.
4. Bend the rods slightly if necessary to promote clamping.Gently slide the shelf board onto the rods from above, aligning with the holes on both sides. Make sure the rods are slightly angled upward (as shown with the arrows in the image) - this prevents the shelf from slipping off.

1. Shelf

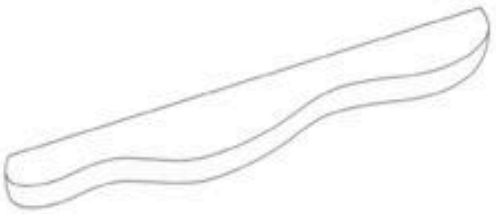

2. Bracket

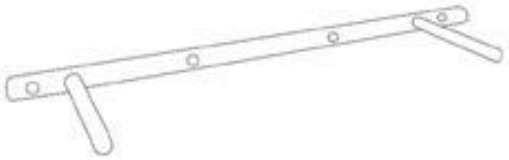

3. Tools required

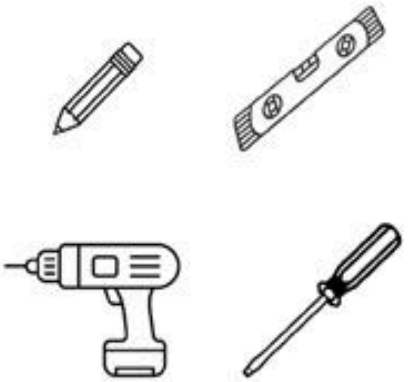

Step 1

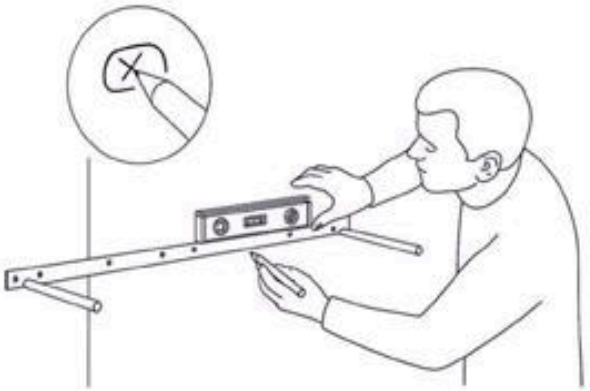

Step 2

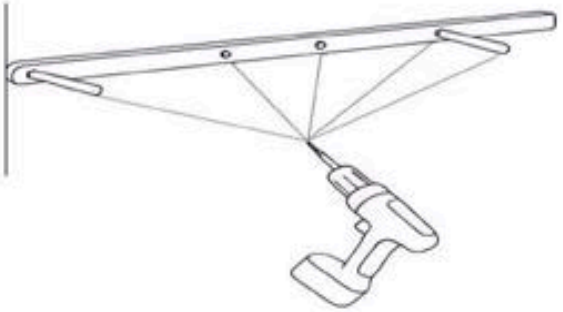

Step 3

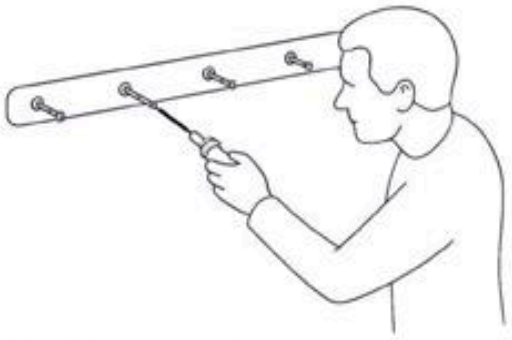

Step 4

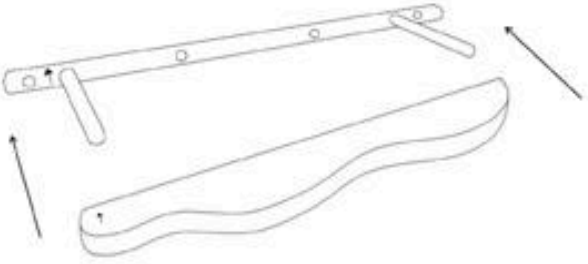

ASSEMBLY COMPLETED!

WARNING! Serious or fatal crushing injuries can occur from furniture falling down.
To prevent this furniture from falling down it must be used with the wall attachment device(s) provided.